

Operating Instructions

Microwave

- Plug appliance in and turn on at the mains
- Place food onto a non metallic plate and place in the centre of the appliance
- Close the door
- Select cooking power level (defrost, low, medium, high etc.)
- Select cooking time, according to food packaging instructions, if available
- In some instances you will then need to select start
- To cancel operation turn the timer to '0', press STOP or open the microwave door

Safety:

- Please wipe clean inside appliance after each use to ensure any remains do not burn on next use
- DO NOT turn the microwave on when empty
- DO NOT put sealed containers into the microwave as they may explode
- DO NOT put metal or paper into the microwave as they may catch fire
- Take care when removing items from the microwave as they are likely to be hot
- For long cooking times, check food every couple of minutes for burning or over cooking
- DO NOT place or store anything on top of the microwave
- NEVER heat oil or fat in your microwave

If you are still unclear on the use of any appliance please speak to a member of staff.

If any appliance does not work – NEVER try to fix it yourself, always report it to reception.

And remember NEVER turn on an appliance and leave it unattended.